


DIGIPRESS

- SETTINGS
- AJUSTES
- PROGRAMMATION
- CONFIGURAZIONE



253PC050 Rev.1 03-2021

WIRING - CABLEADO - CABLÂGE - CABLAGGIO

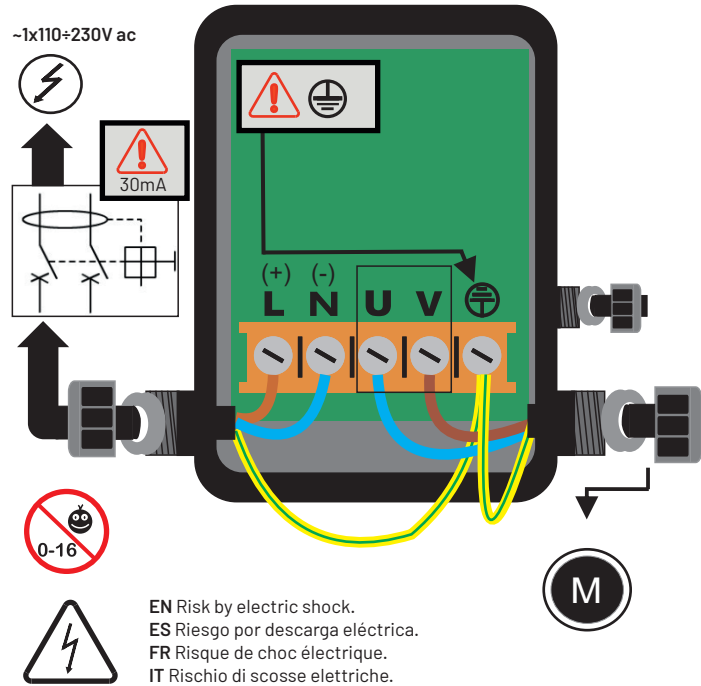

DATA - DATOS - DONNEES - DATI

2,2 kW	.16 A cos φ ≥ 0,6	60°C environnement ambiente environnement	1÷8 bar STOP
~1x110÷230V ac	IP 55	G 1/4" FEM.	7,5 bar MAX
50/60 Hz	50°C water/agua/eau/acqua	0,5÷7 bar start	0,5 bar MIN

MANUAL START

EN Pump
ES Bomba
FR Pompe
IT Pompa

ON

EN SET OVERLOAD PROTECTION
ES CONFIGURAR PROTECCIÓN CONTRA SOBREENTENSIDAD
FR CONFIGURATION DE LA PROTECTION CONTRE LA SURINTENSITÉ
IT CONFIGURAZIONE PROTEZIONE CONTRO LA SOVRINTENSITÀ

1 2 3 4

click!

9.0

A

SET CONFIG.

P START bar/psi

SET CONFIG.

P START bar/psi

1 2 3 4

click!

01.5

04.2

start stop

EN PREVIEW P START bar/psi
ES VISUALIZAR P START bar/psi
FR VISUALISER P START bar/psi
IT VISUALIZZARE P START bar/psi

SETTINGS - AJUSTES - PROGRAMMATION - CONFIGURAZIONE

1 2 3 4 5 6 7 8 9

click!

5"

rc0

r05

s80

s81

rc0=OFF / rc1/2=ON

sB0=OFF / sB1=ON

*** sB

* rc ALARM A04

** rXX: sec START1 r01÷r99 seconds START2

ALARMS - ALARMAS - ALARMES - ALLARMI

CODE

A01 EN DRY-RUN
ES FUNCIONAMIENTO EN SECO
FR MARCHÉ À SEC
IT FUNZIONAMENTO A SECCO

A11 EN DRY-RUN DUE TO MIN.PRESSURE
ES FALTA DE AGUA POR PRESS.MIN
FR MARCHÉ À SEC PAR P RESS.MIN
IT MANCANZA D'ACQUA PER PRESS.MIN


A02 EN OVERLOAD
ES SOBREENTENSIDAD
FR SURINTENSITÉ
IT SOVRINTENSITÀ

A04 EN FAST CYCLING
ES CICLOS RÁPIDOS
FR ÉTAT DE CYCLE RAPIDE
IT CICLI ECCESSIVI

A05 EN DAMAGED PRESSURE SENSOR
ES TRANSDUCTOR A VERIADO
FR CAPTEUR DE PRESSION EN PANNE
IT TRANSDUTTORE GUASTO


DIGIPRESS

- CONFIGURAÇÃO
- KONFIGURACJA
- KONFIGURATION

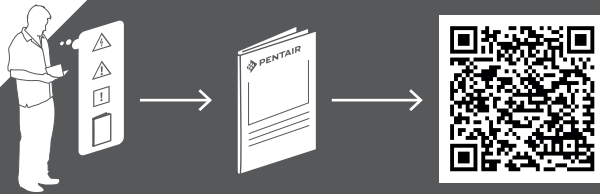

253PC050 Rev.1 03-2021

VERKABELUNG - CABLAGEM - OKABLOWANIE

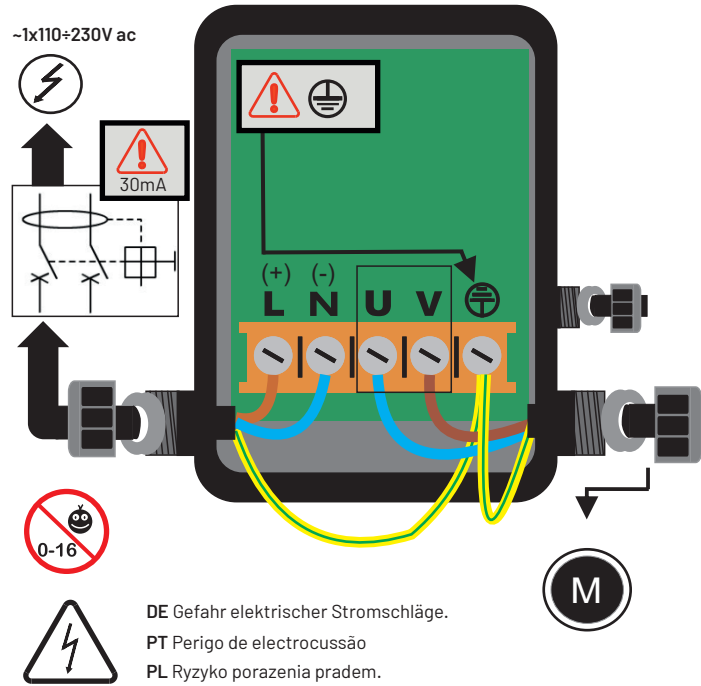


DE Gefahr elektrischer Stromschläge.
PT Perigo de electrocussão
PL Ryzyko porażenia prądem.


DATEN - DADOS - DANE

- P** 2,2 kW
- V** ~1x110÷230V ac
- Hz** 50/60 Hz
- A** .16 A cos φ≥0,6
- IP** 55
- Wasser, Água, Woda** 50°C
- Umfeld** 60°C
Ambiente Srodowisko
- G** 1/4" FEM.
- 0,5÷7 bar** start
- 1÷8 bar** STOP
- 7,5 bar** MAX
- 0,5 bar** MIN

MANUAL START DE Pumpe
PT Bomba
PL Pompa] **ON**

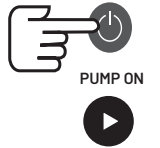

EN KONFIGURATION SCHUTZ GEGEN ÜBERSTROM
ES CONFIGURAÇÃO DA PROTECÇÃO CONTRA SOBREINTENSIDADES
FR KONFIGURACJA ZABEZPIECZENIA PRZED PRZETEZENIEM

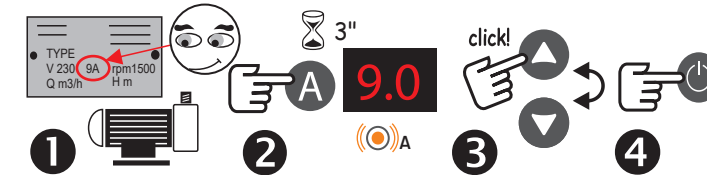

SET CONFIG.	P START bar/psi	SET CONFIG.	P START bar/psi
1	01.5 start	1	04.2 stop
2		2	
3		3	
DE ANZEIGEN PT APRESENTAR PL WYSWIETLIC	P START bar/psi	DE ANZEIGEN PT APRESENTAR PL WYSWIETLIC	P START bar/psi
	01.5 start		04.2 stop

KONFIGURATION - CONFIGURAÇÃO - KONFIGURACJA

1	P bar/psi	5	click! r05 sec
2		6	click! r25 sec
3	click! rc0	7	click! s80 sB0=OFF / sB1=ON
4	click! rc0=OFF / rc1/2=ON	8	click! s81
9	click! rc1	9	click!

* **rc** ALARM A04
** **rXX**: START1 r01÷r99 seconds
*** **sB** STAND-BY-MODUS - MODO STAND-BY TRYB STAND-BY

ALARME - ALARMES - ALARMY

CODE	DESCRIPTION	STATUS
A01	DE DRY-RUN PT FUNCIONAMIENTO EN SECO PL MARCHE À SEC	<input checked="" type="checkbox"/>
A11	DE TROCKENBETRIEB DURCH MINIMALDRUCK PT FALTA DE ÁGUA POR PRESSÃO MÍN. PL BRAK WODY Z POWODU MINIMALNEGO CISNIENIA	<input checked="" type="checkbox"/>
A02	DE ÜBERSTROM PT SOBREINTENSIDADE PL PRZETEZENIE	<input checked="" type="checkbox"/>
A04	DE ÜBERHÖHTE ZYKLEN PT CICLOS EXCESSIVOS PL NADMIERNE CYKLE	<input checked="" type="checkbox"/>
A05	DE GEBER DEFECT PT TRANSDUTOR AVARIADO PL USZKODZONY PRZETWORNIK	<input checked="" type="checkbox"/>